

SPRING-TYPE

GATE CLOSER

Die Cast Aluminum


INSTALLATION INSTRUCTIONS

Ensure post hinges and frame hinges are positioned approximately 8" from the top and bottom of the gate post with top hinge pin pointing down and bottom hinge pin pointing up.

NOTE: 2" spacing required between gate post and gate frame

STEP 1

Spread the spring forks around the gate frame, center assembly and secure with 1/4" carriage bolts.

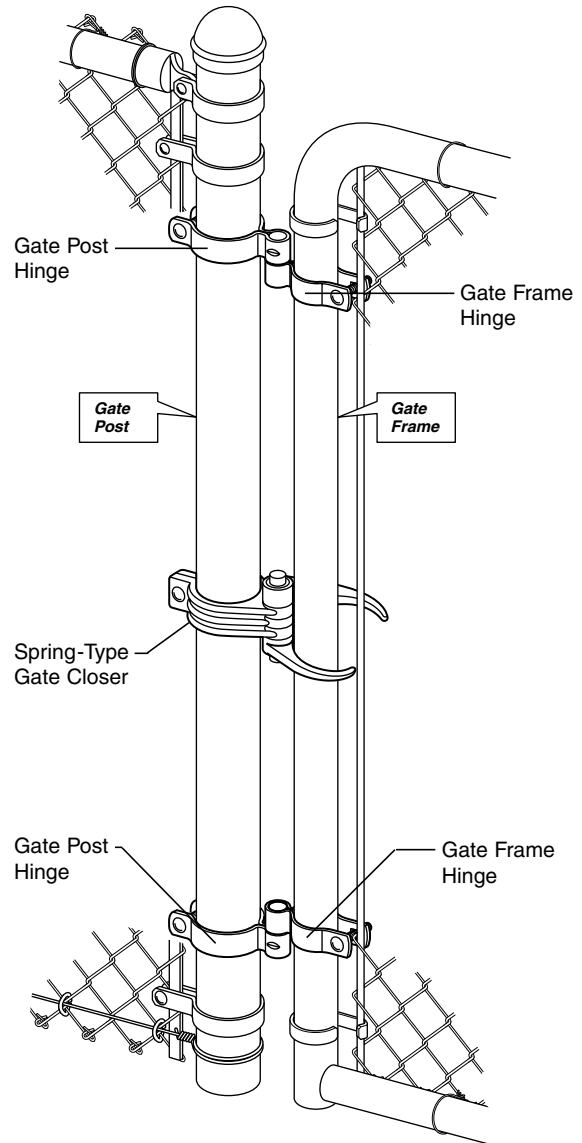

Gate Post Hinge	Gate Frame Hinge	Spring-Type Part No.
1-7/8"	1-3/8"	017403
2-3/8"	1-3/8"	017404

For more information, contact our Customer Service Department:
1-888-MH-FENCE (toll-free)
110 E. La Habra Blvd., La Habra, CA 90631
e-mail: info@fenceonline.com • www.fenceonline.com

