

STA-KLOS

GATE CLOSER

Steel

INSTALLATION INSTRUCTIONS

Ensure post hinges and frame hinges are positioned approximately 8" from the top and bottom of the gate post with top hinge pin pointing down and bottom hinge pin pointing up.

NOTE: 2" spacing required between gate post and gate frame

STEP 1 — Post Clamp

Place post clamp around post and secure in position with 5/16" carriage bolts. Heads of bolts facing gate.


STEP 2 — Spring (Torsion Bar)

Place spring in slot in post clamp and secure with 1/4" bolt, the spring hanging in opening between gate and post.

STEP 3 — Gate Clamp

Slip the gate clamp on the spring from the bottom and fasten the clamp to the gate frame about 1 inch above the end of the spring. Heads of bolts facing the post.

To adjust tension, raise or lower gate clamp on the spring until proper tension is established.

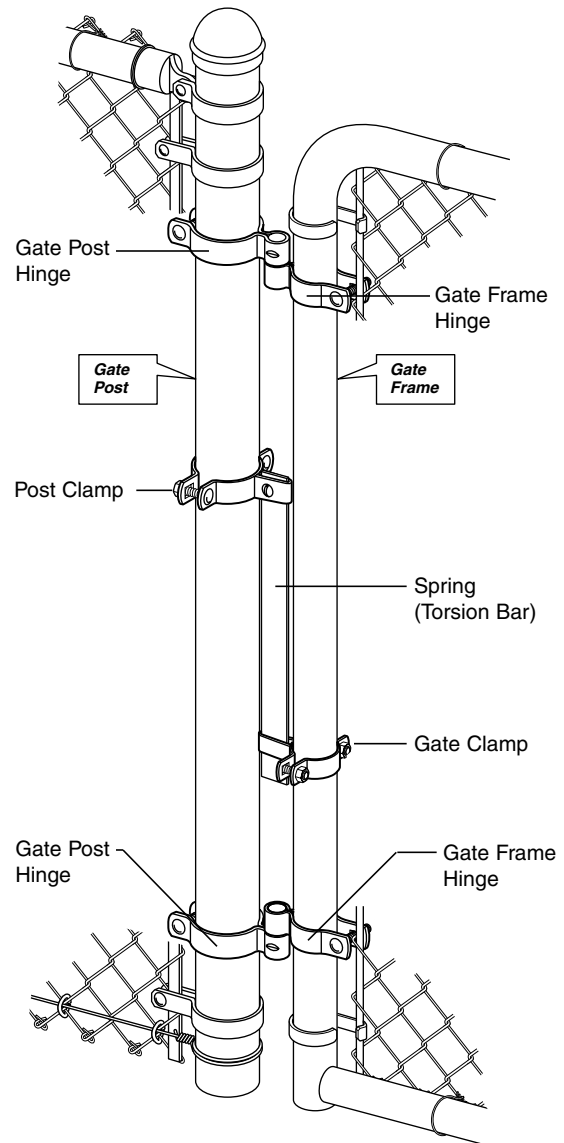

Gate Post Hinge	Gate Frame Hinge	Sta-Klos Part No.
1-7/8"	1-3/8"	017402
2-3/8"	1-3/8"	017405

For more information, contact our Customer Service Department:
1-888-MH-FENCE (toll-free)
110 E. La Habra Blvd., La Habra, CA 90631
e-mail: info@fenceonline.com • www.fenceonline.com

